



## Entering the Windows environment on laser systems with embedded computers.

The Telesis laser systems with embedded computers generally do not give the user access to the Windows environment, they open right in Merlin LS, and when Merlin is closed they shut down. There may be times when you wish to update some files by way of the Windows file structure. You can load patterns and parameters from a USB stick into Merlin, and then save them, but that method isn't possible with custom fonts or logos.

To enter the Windows environment, do the following:

1. Start the system normally. First you will see the Telesis splash screen.
2. The splash screen will blink out, and a Windows progress bar will appear.
3. While the progress bar is visible, press Ctrl and U simultaneously.
4. A text box will appear with the options to start or update.
5. Click Update, and you will be directed to the Windows file structure, where you can copy and paste font files, logos, bitmap images, etc. into the appropriate Merlin folder.
6. When you have finished, close the window, and click the Start button in the text box.

At this point the machine will load Merlin LS and you can proceed as usual.

PTR Sales Team

John Callaghan 269-209-7291 Phil Theaker 248-361-7063

[John@ptrsales.com](mailto:John@ptrsales.com)

[phil@ptrsales.com](mailto:phil@ptrsales.com)