

Embedded PC I/O Ribbon Cable Proper installation

It is possible to connect the I/O cable to the PC motherboard incorrectly. This will cause Merlin II LS ready state to flicker while in monitor mode. Below is the proper wiring arrangement.

